

## 対応機種一覧

### DoCoMo

D701i	D701iWM	D702i	D702iBCL	D702iF	D703i
D704i	D705i	D705i μ	D800iDS	D851iWM	D900i
D901i	D901iS	D902i	D902iS	D903i	D903iTV
D904i	D905i	F-01A	F700i	F700iS	F702iD
F703i	F704i	F705i	F706i	F801i	F880iES
F881iES	F882iES	F883i	F883iES	F883iESS	F883iS
F884i	F884iES	F900i	F900iC	F900iT	F901iC
F901iS	F902i	F902iS	F903i	F903iBSC	F903iX
F904i	F905i	F906i	L600i	L601i	L602i
L704i	L705i	L705iX	L706ie	L852i	M702iG
M702iS	N-03A	N600i	N601i	N700i	N701i
N701iECO	N702iD	N702iS	N703iD	N703i μ	N704i μ
N705i	N705i μ	N706i	N706ie	N706iII	N900i
N900iG	N900iL	N900iS	N901iC	N901iS	N902i
N902iL	N902iS	N902iX	N903i	N904i	N905i
N905iBiz	N905i μ	N906i	N906iL	N906i μ	P-01A
P700i	P701iD	P702i	P702iD	P703i	P703i μ
P704i	P704i μ	P705i	P705iCL	P705i μ	P706ie
P706i μ	P851i	P900i	P900iV	P901i	P901iS
P901iTV	P902i	P902iS	P903i	P903iTV	P903iX
P904i	P905i	P905iTV	P906i	SA700iS	SA702i
SA800i	SH-01A	SH700i	SH700iS	SH702iD	SH702iS
SH703i	SH704i	SH705i	SH705iII	SH706i	SH706ie
SH706iw	SH851i	SH900i	SH901iC	SH901iS	SH902i
SH902iS	SH902iSL	SH903i	SH903iTV	SH904i	SH905i
SH905iTV	SH906i	SH906iTV	SO702i	SO703i	SO704i
SO705i	SO706i	SO902i	SO902iWP+	SO903i	SO903iTV
SO905i	SO905iCS	SO906i			

### au

A1101S	A1301S	A1302SA	A1303SA	A1304T	A1304TII
A1304Tカメラ無し	A1305SA	A1401K	A1402S	A1402SII	A1402SIIカメラ無し
A1403K	A1404S	A1404SII	A1405PT	A1406PT	A1407PT
A3011SA	A3012CA	A3013T	A3014S	A3015SA	A5301T
A5302CA	A5303H	A5303HII	A5304T	A5305K	A5306ST
A5307ST	A5401CA	A5401CAII	A5402S	A5403CA	A5404S
A5405SA	A5406CA	A5407CA	A5501T	A5502K	A5503SA
A5504T	A5505SA	A5506T	A5507SA	A5508SA	A5509T
A5510SA	A5511T	A5512CA	A5513CA	A5514SA	A5515K
A5516T	A5517T	A5518SA	A5518SAカメラなし	A5519SA	A5520SA
A5520SAII	A5521K	A5522SA	A5523T	A5524SA	A5525SA
A5526K	A5527SA	A5527SAカメラなし	A5528K	A5529T	B01K
C3001H	C3002K	C3003P	C5001T	E02SA	E03CA
W11H	W11K	W21CA	W21CAII	W21H	W21K

## 対応機種一覧

W21S	W21SA	W21T	W22H	W22SA	W31CA
W31H	W31K	W31KII	W31S	W31SA	W31SAII
W31T	W32H	W32K	W32S	W32SA	W32T
W33SA	W33SAII	W41CA	W41H	W41K	W41S
W41SA	W41SH	W41T	W42CA	W42H	W42K
W42S	W42SA	W42T	W43CA	W43H	W43HII
W43K	W43S	W43SA	W43T	W44K	W44K IIカメラなしモデル
W44KII	W44S	W44T	W45T	W46T	W47T
W51CA	W51H	W51K	W51P	W51S	W51SA
W51SH	W51T	W52CA	W52H	W52K	W52P
W52S	W52SA	W52SH	W52T	W53CA	W53H
W53K	W53S	W53SA	W53T	W54S	W54SA
W54T	W55SA	W55T	W56T	W61CA	W61H
W61K	W61P	W61PT	W61S	W61SA	W61SH
W61T	W62CA	W62H	W62K	W62P	W62PT
W62S	W62SA	W62SH	W62T	W63K	W63Kカメラ無し
W63S	W63SA	W63SH	W63T	W64K	W64S
W64SA	W64T	W65K			

## SoftBank

703N	703SH	703SHf	705N	705NK	705P
705Px	705SC	705SH	705T	706N	706P
706SC	707SC	707SCII	708SC	709SC	802N
802SH	803T	804N	804NK	804SH	804SS
805SC	810P	810SH	810T	811SH	811T
812SH	812SH s	812SH sII	812T	813SH	813SH for Biz
813T	814SH	814T	815SH	815T	816SH
820N	820P	820SC	820SH	820T	821N
821P	821SC	821SH	821T	822P	822SH
822T	823P	823SH	823T	824P	824SH
824T	825SH	830P	830SH	830SHs	902SH
902T	903SH	903T	904SH	904T	905SH
910SH	910T	911SH	911T	912SH	912T
913SH	920P	920SC	920SH	920SH YK	920T
921P	921SH	921T	922SH	923SH	DM001SH
DM002SH					