

対応機種一覧

DoCoMo

D701i	D701iWM	D702i	D702iBCL	D702iF	D703i
D704i	D705i	D705i μ	D800iDS	D851iWM	D900i
D901i	D901iS	D902i	D902iS	D903i	D903iTV
D904i	D905i	F-01A	F-02A	F-03A	F-04A
F-05A	F-06A	F-07A	F700i	F700iS	F702iD
F703i	F704i	F705i	F706i	F801i	F880iES
F881iES	F882iES	F883i	F883iES	F883iESS	F883iS
F884i	F884iES	F900i	F900iC	F900iT	F901iC
F901iS	F902i	F902iS	F903i	F903iBSC	F903iX
F904i	F905i	F906i	L-01A	L-03A	L600i
L601i	L602i	L704i	L705i	L705iX	L706ie
L852i	M702iG	M702iS	N-01A	N-02A	N-03A
N-04A	N-05A	N600i	N601i	N700i	N701i
N701iECO	N702iD	N702iS	N703iD	N703i μ	N704i μ
N705i	N705i μ	N706i	N706ie	N706iII	N900i
N900iG	N900iL	N900iS	N901iC	N901iS	N902i
N902iL	N902iS	N902iX	N903i	N904i	N905i
N905iBiz	N905i μ	N906i	N906iL	N906i μ	P-01A
P-02A	P-03A	P-04A	P-05A	P-06A	P700i
P701iD	P702i	P702iD	P703i	P703i μ	P704i
P704i μ	P705i	P705iCL	P705i μ	P706ie	P706i μ
P851i	P900i	P900iV	P901i	P901iS	P901iTV
P902i	P902iS	P903i	P903iTV	P903iX	P904i
P905i	P905iTV	P906i	SA700iS	SA702i	SA800i
SH-01A	SH-02A	SH-03A	SH-04A	SH700i	SH700iS
SH702iD	SH702iS	SH703i	SH704i	SH705i	SH705iII
SH706i	SH706ie	SH706iw	SH851i	SH900i	SH901iC
SH901iS	SH902i	SH902iS	SH902iSL	SH903i	SH903iTV
SH904i	SH905i	SH905iTV	SH906i	SH906iTV	SO702i
SO703i	SO704i	SO705i	SO706i	SO902i	SO902iWP+
SO903i	SO903iTV	SO905i	SO905iCS	SO906i	

au

A1101S	A1301S	A1302SA	A1303SA	A1304T	A1304TII
A1304Tカメラ無し	A1305SA	A1401K	A1402S	A1402SII	A1402SIIカメラ無し
A1403K	A1404S	A1404SII	A1405PT	A1406PT	A1407PT
A3011SA	A3012CA	A3013T	A3014S	A3015SA	A5301T
A5302CA	A5303H	A5303HII	A5304T	A5305K	A5306ST
A5307ST	A5401CA	A5401CAII	A5402S	A5403CA	A5404S
A5405SA	A5406CA	A5407CA	A5501T	A5502K	A5503SA
A5504T	A5505SA	A5506T	A5507SA	A5508SA	A5509T
A5510SA	A5511T	A5512CA	A5513CA	A5514SA	A5515K
A5516T	A5517T	A5518SA	A5518SAカメラなし	A5519SA	A5520SA
A5520SAII	A5521K	A5522SA	A5523T	A5524SA	A5525SA

対応機種一覧

A5526K	A5527SA	A5527SAカメラなし	A5528K	A5529T	B01K
C3001H	C3002K	C3003P	C5001T	CA001	CA002
E02SA	E03CA	E05SH	H001	K001	K002
NS01	NS02	P001	S001	SH001	SH002
SHY01	SOX01	SOY01	T001	W11H	W11K
W21CA	W21CAII	W21H	W21K	W21S	W21SA
W21T	W22H	W22SA	W31CA	W31H	W31K
W31KII	W31S	W31SA	W31SAII	W31T	W32H
W32K	W32S	W32SA	W32T	W33SA	W33SAII
W41CA	W41H	W41K	W41S	W41SA	W41SH
W41T	W42CA	W42H	W42K	W42S	W42SA
W42T	W43CA	W43H	W43HII	W43K	W43S
W43SA	W43T	W44K	W44K IIカメラなしモデル	W44KII	W44S
W44T	W45T	W46T	W47T	W51CA	W51H
W51K	W51P	W51S	W51SA	W51SH	W51T
W52CA	W52H	W52K	W52P	W52S	W52SA
W52SH	W52T	W53CA	W53H	W53K	W53S
W53SA	W53T	W54S	W54SA	W54T	W55SA
W55T	W56T	W61CA	W61H	W61K	W61P
W61PT	W61S	W61SA	W61SH	W61T	W62CA
W62H	W62K	W62P	W62PT	W62S	W62SA
W62SH	W62T	W63CA	W63H	W63K	W63Kカメラ無し
W63S	W63SA	W63SH	W63T	W64K	W64S
W64SA	W64SH	W64T	W65K	W65S	W65T

SoftBank

703N	703SH	703SHf	705N	705NK	705P
705Px	705SC	705SH	705T	706N	706P
706SC	707SC	707SCII	708SC	709SC	731SC
802N	802SH	803T	804N	804NK	804SH
804SS	805SC	810P	810SH	810T	811SH
811T	812SH	812SH s	812SH sII	812T	813SH
813SH for Biz	813T	814SH	814T	815SH	815T
816SH	820N	820P	820SC	820SH	820T
821N	821P	821SC	821SH	821T	822P
822SH	822T	823P	823SH	823T	824P
824SH	824T	825SH	830CA	830N	830P
830SH	830SHs	830T	831P	831SH	831SHs
831T	832P	902SH	902T	903SH	903T
904SH	904T	905SH	910SH	910T	911SH
911T	912SH	912T	913SH	920P	920SC
920SH	920SH YK	920T	921P	921SH	921T
922SH	923SH	930CA	930P	930SC	930SH
931SH	932SH	933SH	934SH	DM001SH	DM002SH

対応機種一覧

DM003SH